



## Rascal Super User Guide

To Full Set

X X X X

Enter your 4-digit PIN code. Exit time will start. Leave premises by designated exit route. System will set automatically on completion of exit time.

To Part Set

X X X X  
\* 0

Enter your 4-digit code. Press \* followed by 0. Exit time will start. Isolated zone LED's will flash. System will Part Set automatically on completion of Part Set exit time.

To Home Set

X X X X  
\* 6

Enter your 4-digit PIN code. Press \* followed by 6. Exit time will start. Isolated zone LED's will flash. System will Home Set automatically on completion of Part Set exit time.

To Unset  
(No Alarm)

X X X X

Enter your 4-digit PIN code to Unset system and revert to 'Day' mode.

To Reset  
(After an Alarm)



X X X X  
LEDS ON FOR ZONE ACTIVATION  
X X X X  
#

Sounders/Strobe operating. Enter your 4-digit PIN code.

Sounders/Strobe silenced. LED's on for zone activation. Re-enter 4-digit PIN code followed by # to reset the system.

Change User PIN  
code

X X X X  
\* 9 1  
Y Y Y Y

Enter your 4-digit PIN code. Press \* then 9, then 1. Enter your NEW 4-digit PIN code.

Bell Test

X X X X  
\* 9  
\*

Enter your 4-digit PIN code. Press \* then 9. System runs Auto Test. Press \* on completion to exit Bell Test.

Walk Test

X X X X  
\* 9 4  
\*

Enter your 4-digit PIN code. Press \*, then 9, then 4 to Walk Test detectors. Press \* on completion to exit walk test.